

Navigating the inside of your Faye's Her

The only user serviceable parts in the Faye's Her are the two trimpots that control volume of the individual circuits. These are framed in red and are:

1. Right circuit volume
2. Left circuit volume

When the pedal is open for adjustment, take particular care to avoid the areas framed in yellow. These areas include covered LED/photoreistor arrays and calibration trimpots that are not to be disturbed.

